


## Iron Fence Panel Hardware


### Corner Bracket

- 1 With the bolts assembled loosely through the holes in the brackets, slide three corner brackets down on to the post so that the tabs on the brackets point in the direction of the fence panels. Slide the top bracket up toward the top of post.
- 2 Remove one of the bolts and insert the top rail of the fence panel between the tabs on the bracket. Insert the bolt through the holes in the bracket tabs and the holes in the panel rail. Tighten the bolt slightly.
- 3 Repeat step 2 using the next panel in the fence line.
- 4 Slide the top bracket (with the two panels attached) to the desired height on the post and tighten the bolts (fig.CB1). Place blocks under the panels to hold them at the desired height if necessary.
- 5 Fasten the bracket to the post using the two #14 X 3/4" screws provided.
- 6 Attach the two remaining brackets to the panels as described in steps 2, 3 and 5.

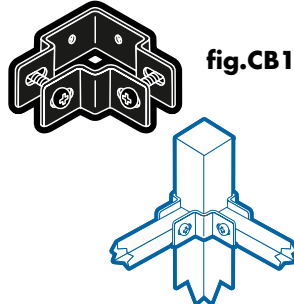


### Line Bracket

- 1 With the bolts assembled loosely through the holes in the brackets, slide three line brackets down on to the post so that the brackets run parallel with the fence line. Slide the top bracket up towards the top of the post.
- 2 Remove one of the bolts and insert the top rail of the fence panel between the tabs on the bracket. Insert the bolt through the holes in the bracket tabs and the holes in the panel rail. Tighten the bolt slightly.
- 3 Repeat step 2 using the next panel in the fence line.
- 4 Slide the top bracket (with the two panels attached) to the desired height on the post and tighten the bolts. Place blocks under the panels to hold them at the desired height if necessary.
- 5 Fasten the bracket to the post using the two #14 X 3/4" screws provided.
- 6 Attach the two remaining brackets to the panels as described in steps 2, 3 and 5.

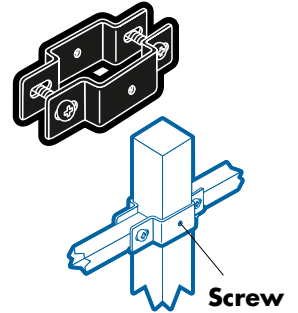

### End Bracket

- 1 With the bolts assembled loosely through the holes in the bracket, slide three end brackets down on to the post so that the tabs on the bracket point in the direction of the fence panel. Slide the top bracket up towards the top of the post.
- 2 Remove one of the bolts and insert the top rail of the fence panel between the tabs on the bracket. Insert the bolt through the holes in the bracket tabs and the holes in the panel rail. Tighten the bolt slightly.
- 3 Slide the top bracket (with the panel attached) to the desired height on the post and tighten the bolts. Place blocks under the panels to hold them at the desired height if necessary.
- 4 Fasten the bracket to the post using the two #14 X 3/4" tek screws provided.
- 5 Attach the two remaining brackets to the panels as described in steps 2 and 4.

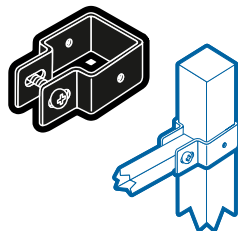

### Wall Bracket

- 1 Position the top wall bracket in place with the tabs positioned as shown.
- 2 Fasten the bracket in place using appropriate type of fastener for the surface you are mounting to (wood masonry, etc).
- 3 Insert the fence panel rail between the tabs of the bracket and insert the bolt provided. Place blocks under the panel to hold it at the desired height if necessary.
- 4 Attach the two remaining brackets to the panel as described in steps 1 through 3.

